




SLR 300/310

Room light transmitter
 Belysnings transmitter för rum
 Raumhelligkeitsfühler
 Sonde de lumière (ambiance)
 Sensor de claridad interna
 Sensore ambiente di luminosità

OFL-4184-000

Instruction
 Montageanvisning
 Bedienungsanleitung
 Instructions d'installation
 Instrucciones de empleo
 Istruzioni per installazioni


1.

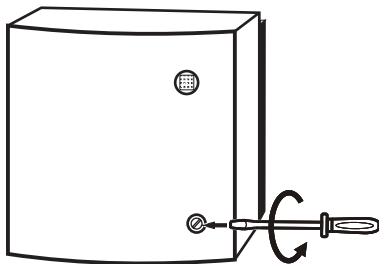


2.




3.

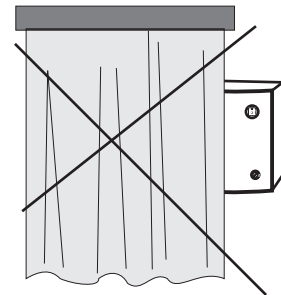

4.

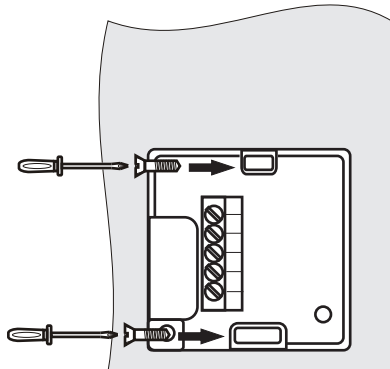


5.

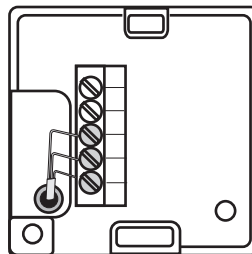


6.

4...20mA SLR 300

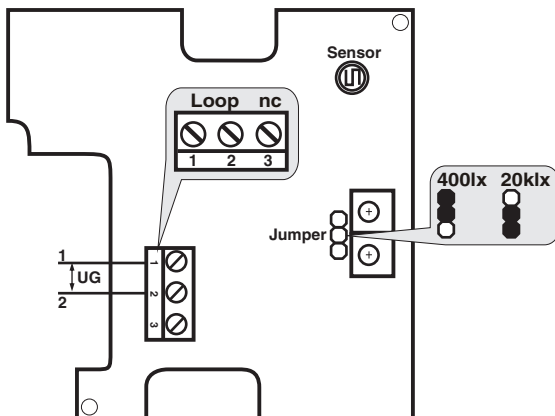

UG=15...36 VDC

0...10V SLR 310

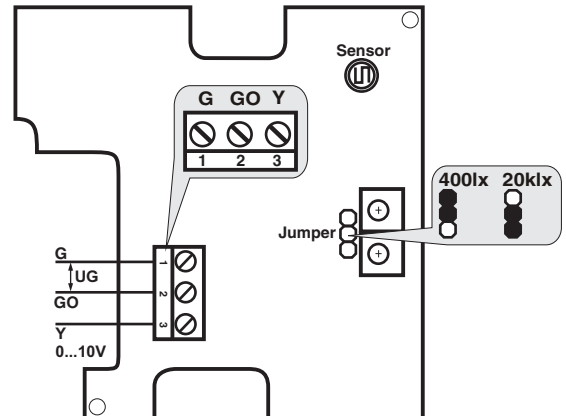

UG=15...36 VDC / 24 VAC