




STC 300


Pipe contact temperature transmitter
Anlignings temperaturtransmitter
Anlegetemperaturm esumformer
Convertisseur de sonde d'applique
Transmisor de temperatura aplicada
Trasformatore temperatura a contatto

OFL-4188-000

Instruction
Montageanvisning
Bedienungsanleitung
Instructions d'installation
Instrucciones de empleo
Istruzioni per installazioni

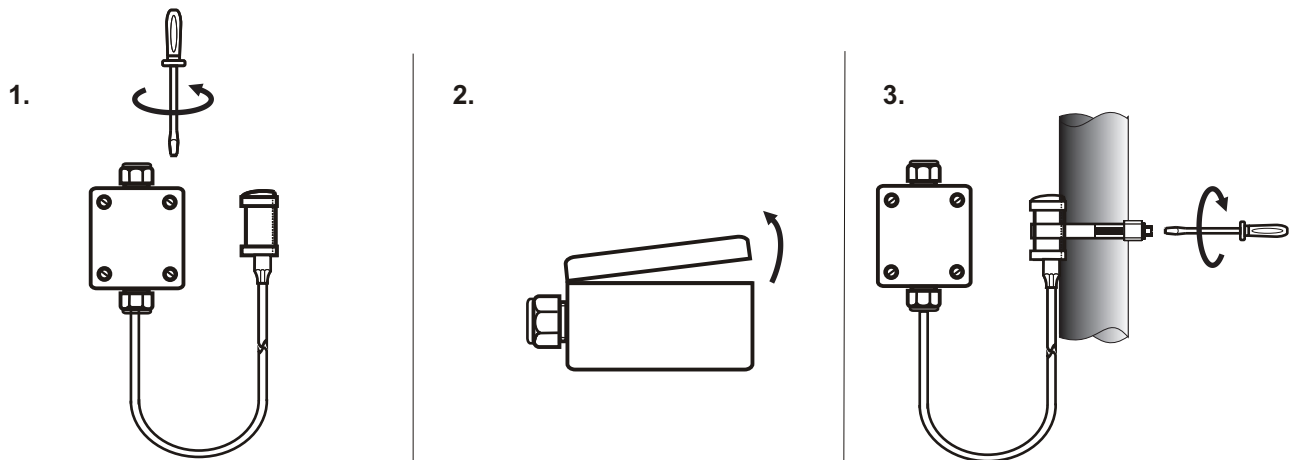

4. 4...20mA

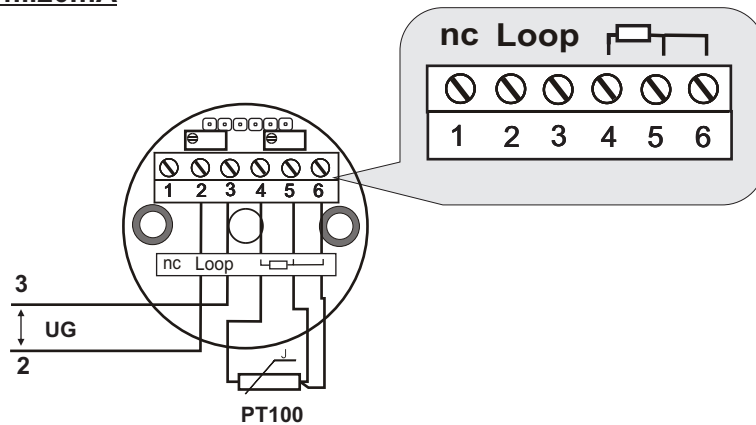

UG=15...36 V DC