




SPD110/ SPD160

Differential pressure sensor
Differensetryckgivare
Differenzdrucktransmitter
Sonde de pression air
Presostatos diferenciales aire
Trasmettitore di pressione differenziale per aria


OFL-4196-000

Instruction
Montageanvisning
Bedienungsanleitung
Instructions d'installation
Instrucciones de empleo
Istruzioni per installazioni


1.

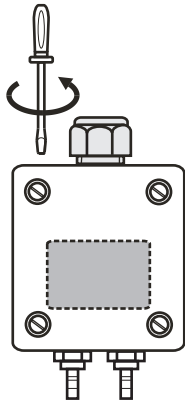


2.

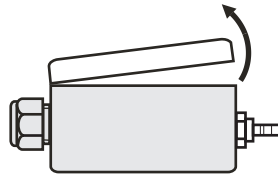


3.

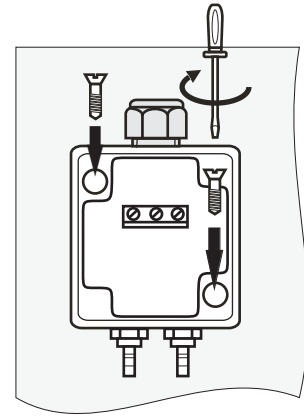


4.

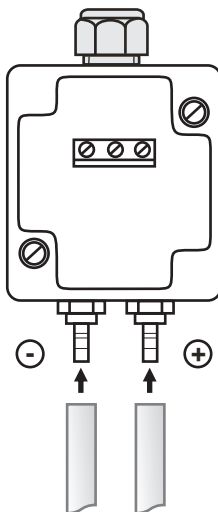

5.

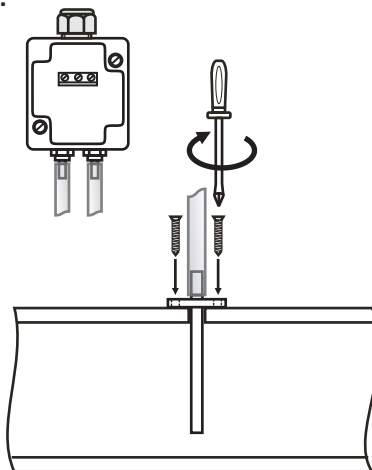


6.

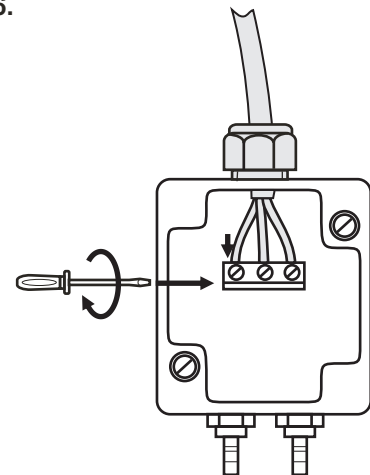

7.

0...10V

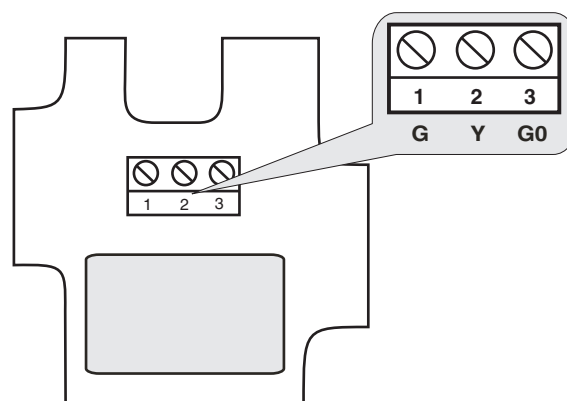

UG=15...36 VDC / 24 VAC ±10%