




STC110

Pipe contact temperature sensor
Anlignings temperaturgivare
Anlegetemperatursensor
Sonde d'applique
Sensor de temperatura aplicada
Sensore temperatura a contatto

OFL-4216-000

Instruction
Montageanvisning
Bedienungsanleitung
Instructions d'installation
Instrucciones de empleo
Istruzioni per installazioni

1.

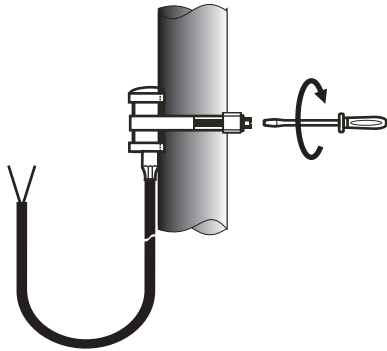

2.

